

EN Update procedure Type 7

This update procedure is for a DayClock type 7 only with the logo below on the back



(sub-instructions are not always shown)

1. Make sure your Account and WiFi are active on the DayClock and press "Test".
2. Now swipe the screen down from the "DayClock settings menu" until the "gear" appears on the top menu line and select it.
3. Find and select "Apps & notifications".
4. Find and select "Advanced".
5. Find and select "Default apps".
6. Find and select "Home app".
7. Select "Launcher3".
8. Press the square on the bottom menu line.
9. Find and select the tab "Chrome".
10. Type the web address on the top menu line "<http://bit.ly/2yvV3o2>".
11. Select "Enter" (arrow to the right).
12. Select "download" and "open".
13. Select "Install" and "Done".
14. Swipe the screen down 2x again and select the gear.
15. Find and select "Apps and notifications".
16. Find and select "Advanced".
17. Find and select "Default apps".
18. Find and select "Home app".
19. Select "Clock".
20. Press the circle  on the bottom menu line.
21. You now have the latest version.